Repairing Verizon Wireless CDM 7075 LED Screen

This guide will instruct you on how to replace the LED screen on the Verizon Wireless CDM 7075.

Written By: Corey Ryman

INTRODUCTION

Please ensure you have followed the prerequisite guide of removing the battery before proceeding with this guide.

TOOLS:

- Phillips #00 Screwdriver (1)
- Plastic Opening Tools (1)

Step 1 — Battery

- Depress the gray button on the back panel of the cell phone.

Step 2

- Press down and slide the back panel to remove it from the phone, while continuing to hold the gray button.

Step 3

- Carefully remove the battery from the phone, prying from the top.

Step 4 — LED Screen

- Remove the rubber plugs from the screen holes around the screen.

Step 5

- Remove the four screws from around the phone's screen.

Step 6

- Pry the top cover off the phone with a plastic opening tool.

Step 7

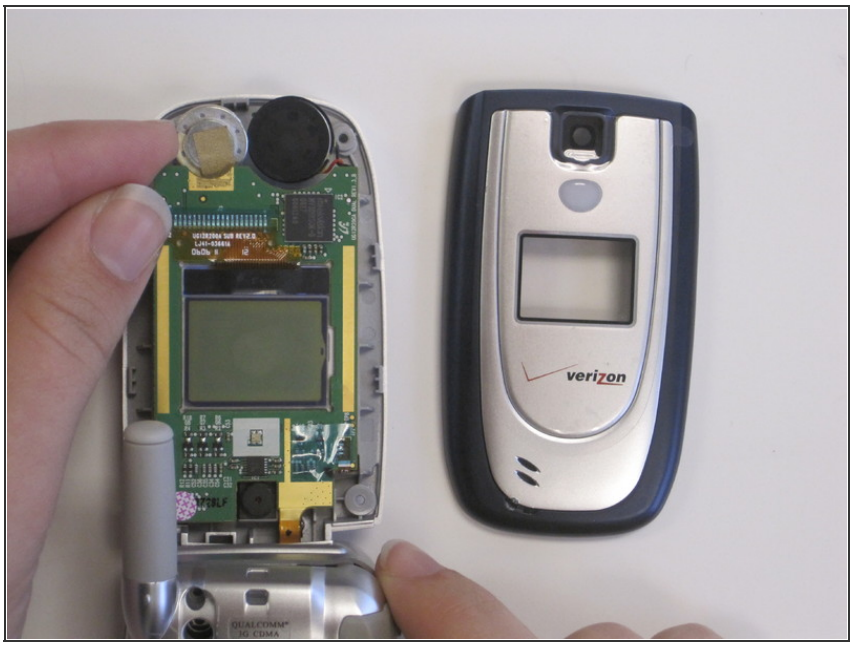

- Remove the screen assembly from the phone.

Step 8

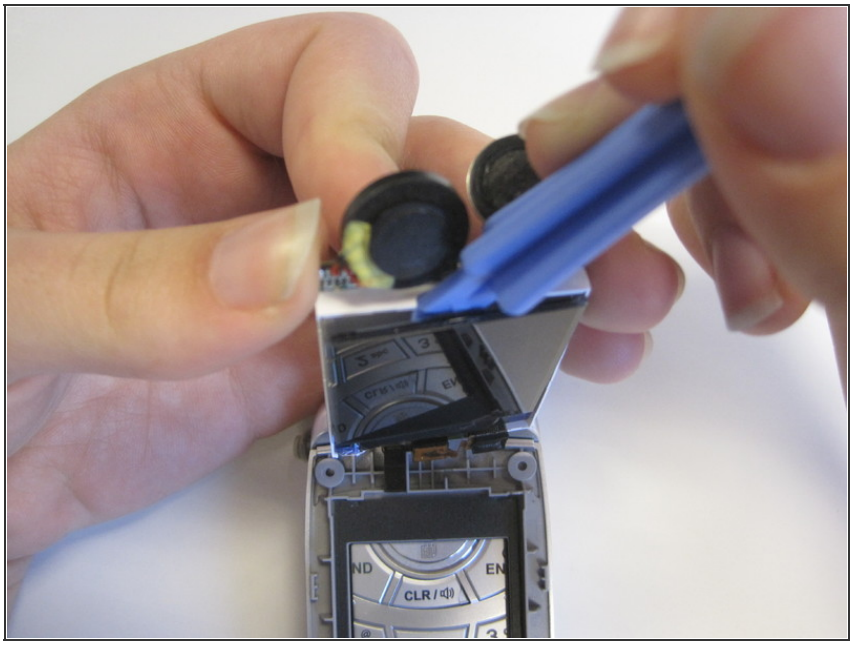

- Pry the screen off the circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2015-05-12 06:46:03 AM.